



timely delivery.

Rotor Loading and Unloading Machine

As a professional high quality SHUAIRUI® Rotor Loading and Unloading Machine manufacture, you can rest assured to buy Rotor Loading and Unloading Machine from our factory and we will offer you the best after-sale service and

Fax:+86-512-68183855

SHUAIRUI® Rotor Loading and Unloading Machine







Equipment introduction:

- 1. This machine is used for the loading and unloading process of the rotor.
- 2. This equipment is used for automatic loading and unloading of rotors.
- 3. The equipment adopts X, Y, Z, 3-axis linkage mode for automatic placement.
- 4. The X, Y and Z axes are controlled by servo motors.
- 5. There are 2 ways to swing the plate, vertical and horizontal.
- 6.According to the different requirements of customers.
- 7.Tray capacity: 3 pieces. (Can be customized according to different requirements of customers).
- 8. Working air pressure: 0.5-0.7MPa.

Address: No. 35 Aige Hao Road, Weitang Town, Xiangcheng District, Suzhou

Tel:+86-18962186860 Fax:+86-512-68183855

E-mail:Xiaoshou1@sz-shuairui.com